




Application:
 Ford Mustang 2005 - 2009
 Ford F-150 2004 - 2008
For Amplified & Non-Amplified Vehicles

CT20FD12 ISO Harness

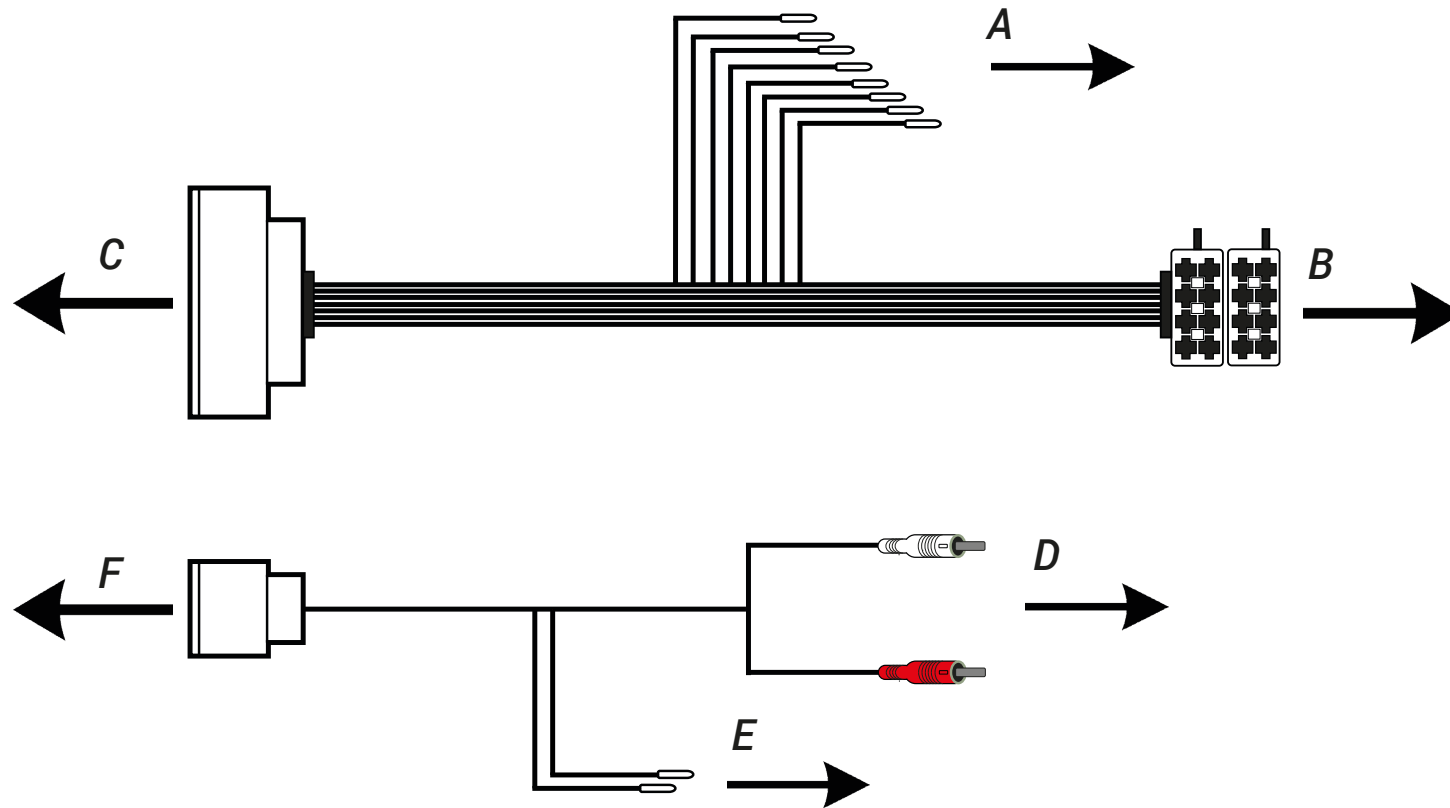

- A** Wiring Connections to Vehicle
- | | |
|--------------|-----------------|
| Black | Ground |
| Yellow | 12V Perm. |
| Red | 12V Ign. |
| Pink | Tel. Mute |
| Blue | Ant. Power |
| Orange/White | Illumination |
| Orange/Black | Illumin. Ground |
| Brown | Not Used |
- B** Connect 2 x 8 pin ISO to vehicle
- C** Connect to vehicle OEM connector
- D** Connect RCA connections to pre-amp outputs
- | | |
|-------|---------------------|
| Red | Preamp Output Right |
| White | Preamp Output Left |
- E** Solder both blue/white wires to 1.5k Ohm resistor and connect to vehicle amplifier remote connector
- F** Connect to vehicle OEM antenna connector

Need help? Visit support.connects2.com/tickets/technical

The information provided in this document is subject to change without notice due to manufacturer changes and/or improvements to the product/s. This instruction manual is based on documented data and research. The manufacturer of this product cannot be held responsible for any changes made to the vehicle by the manufacturer or damages that may occur through the installation of this product in accordance with the steps outlined herein.