



MANUAL INSTRUCTIONS

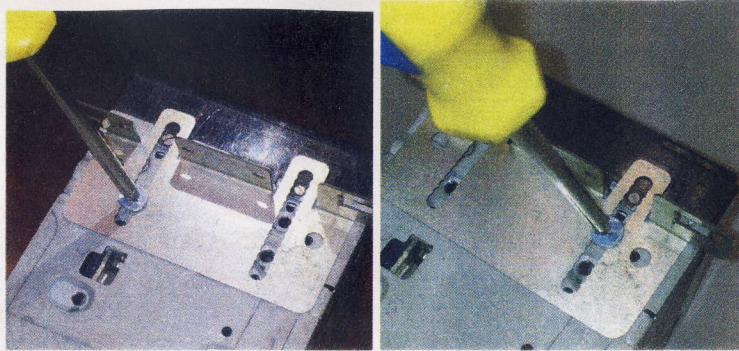


MOUNT THE 2DIN METAL BRACKETS ON THE 2DIN
AFTERMARKET RADIO

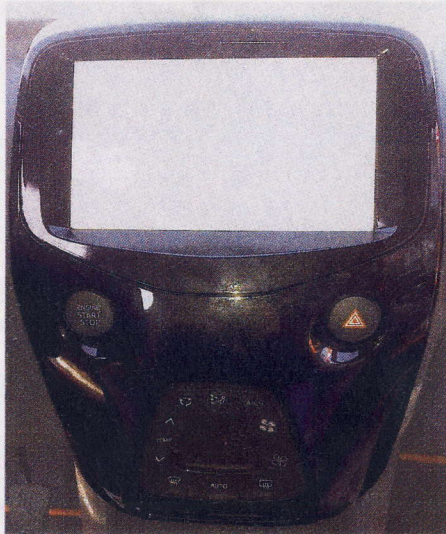

INSTALL THE AFTERMARKET RADIO AND REASSEMBLE THE
DASHBOARD ON THE CAR IN REVERSE ORDER TO FINISH
INSTALLATION

IMPORTANT: USE AFTERMARKET RADIO WITH MAXIMUM
DEPTH OF 150mm

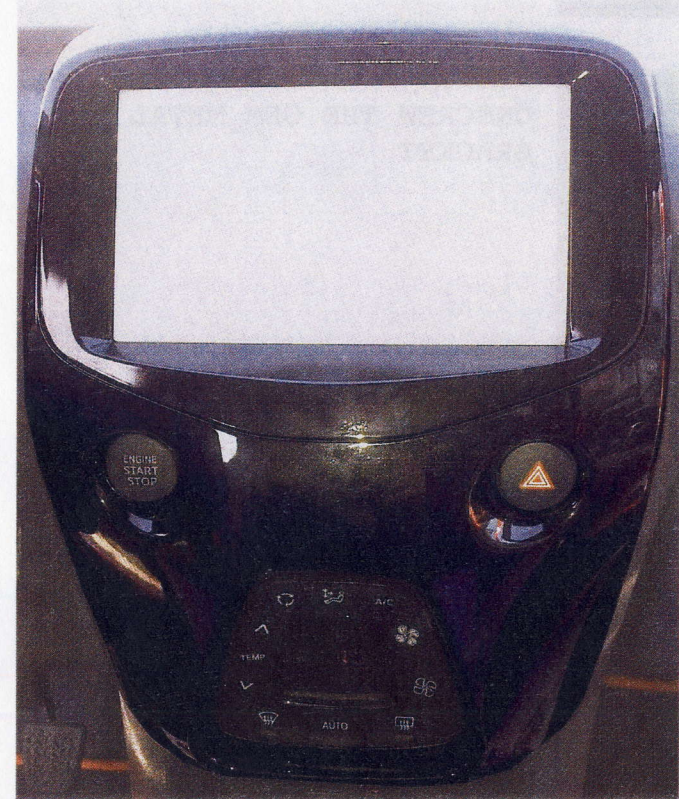


2DIN FITTING KIT

C1-108-AYGO 2014>




REMOVE THE OEM UNIT RADIO
AND THE OEM DASHBOARD AS
SHOW ON THE PICTURE

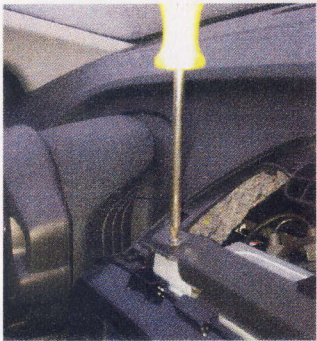


UNSCREW THE OEM METAL
BRACKET




REMOVE THE PLASTIC HOLDER
POSITIONED BELOW THE OEM
RADIO

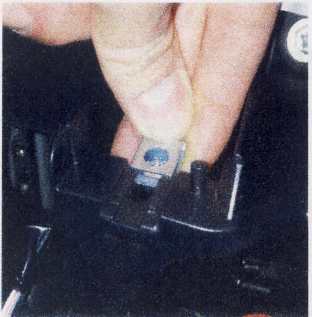

REMOVE CLIP AND ORIGINAL
SCREW TO BE USED FOR
FIXING THE PLASTIC
HOLDER

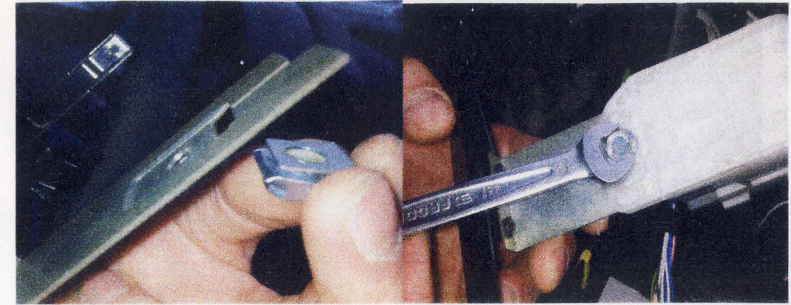

FASTEN THE PLASTIC HOLDER ON THE METAL PLATE
SUPPLIED USING THE OEM SCREW AND CLIP

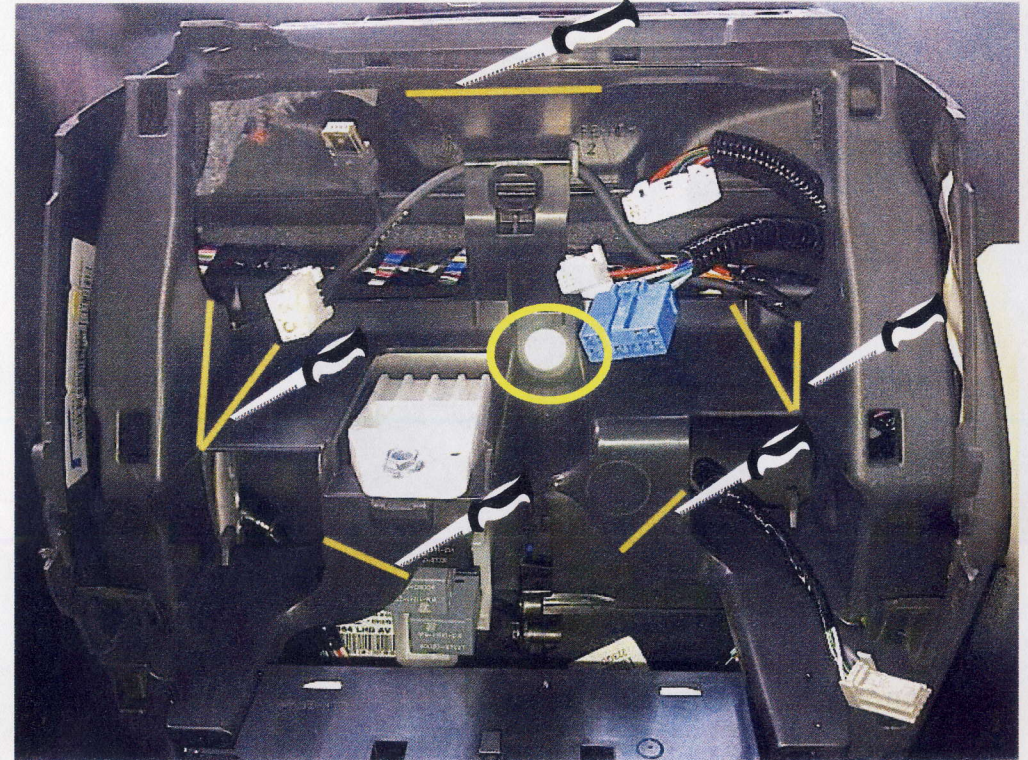

CUT OEM DASHBOARD IN THE POSITIONS SHOWN IN THE
PICTURE, UNSCREW THE CENTRAL SCREW POSITIONED ON
THE BOTTOM, AND REMOVE THIS PART TO ALLOW THE
FIXING OF THE AFTERMARKET RADIO.